

Change Notice

S, SW & SB Series

Changes in Production for S Toggles, SW Rockers & SB Pushbuttons

Type of Change:

- Engineering Part Number
- Product Appearance

1. S Toggle, SW Rocker and SB Pushbutton switches will have an update to the method of display for part numbers on the switch bodies. Previously, the part numbers were displayed on identification plates, which will be changed to laser application. The revision applies to standard, custom and UL/CSA approved products. See page 2 for tables of the effected part numbers.



Changes for S Toggles, SW Rockers, SB Pushbuttons

	Part Number	
	Before Change	After Change
Method	Displayed on Identification Plate	Displayed by Laser Marking
Color of Part No.	Black	Off-White

Notes

There are no changes to the switches' dimensions or specifications. The location of the part number may vary depending on the product. Contact the factory if more details are needed.

Type of Change:

- Engineering Part Number
- Product Appearance

2. S Toggles, SW Rockers and SB Pushbuttons will have a revision to the location of lot numbers on the switch cases. The lot numbers will change from placement on the front of the switches to the side, as depicted below. This will apply to standard, custom and UL/CSA approved products. Effected part numbers are shown on page 2.

	Lot Number	
	Before Change	After Change
Example: S6A		
Location of Lot Number on Switch Case		

Notes

There are no changes to the switches' dimensions or specifications. Contact the factory if more details are needed.

Effective Date

Production changes for S Toggles, SW Rockers and SB Pushbuttons will be effective November 2018.

NKK SWITCHES CO., LTD. <https://www.nkk.com> E-mail: nkkswitches@nkkswitches.co.jp

715-1 Unane, Takatsu-ku, Kawasaki-shi, 213-8553 Japan TEL: +81 44 813 8001 FAX: +81 44 813 8031

Change Notice

S, SW & SB Series

Changes in Production for S Toggles, SW Rockers & SB Pushbuttons

S Toggles Part Numbers for Changes 1 & 2					
S1A	S2A	S332R	S338T	S422	S5AW
S1AL	S2AL	S332T	S339	S422T	S6A
S1AW	S2AW	S333	S339R	S423	S6AL
S1F	S2F	S333F	S339T	S423T	S6AW
S21A	S331	S333R	S3A	S425	S7A
S21AL	S331F	S333T	S3AL	S425T	S7AL
S21AW	S331R	S335	S3AW	S428	S7AW
S25AW	S331T	S335T	S3F	S428T	S8AW
S28AW	S332	S338	S421	S429	S9AW
S29AW	S332F	S338R	S421T	S429T	—

SW Rockers Part Numbers for Changes 1 & 2					
SW3001A	SW3002A	SW3003A	SW3006A	SW3007A	SW3008A

SB Pushbuttons Part Numbers for Changes 1 & 2			
SB221NC	SB221TNC	SB265	SB61B
SB221NO	SB221TNO	SB61A	SB63A